





VP2002

Mobile Digital Terrestrial Receiver
User Manual



1. List of abbreviations

CH	Channel
EPG	Electronic Program Guide
OSD	On Screen Display
PIG	Picture in Graphic
RCU	Remote Control Unit
STB	Set Top Box – this is the actual unit, the VP2002 Normally this will be built in to the vehicle and it will not be necessary for the user to access it.
TV	Television

Button	Explanation of Function(s)	Relevant Section
EXIT	a. Return to the previous menu in menu screen or escape from menu b. Return to normal TV mode from a menu. Repeated pressing will take you through all opened menus until normal TV mode is reached	various
MENU	Press once to enter Main Menu The Main Menu consists of 4 sub-menus <ul style="list-style-type: none"> ■ CH manager ■ Channel Search ■ Setup ■ Info & Conax. 	6 6.1 6.2 6.3 6.4
CH▲ CH▼	a. Change channels (channel up, channel down) b. Toggle between menu items (up/down)	various
VOL◀ VOL▶	a. Audio volume (up / down) b. Toggle between menu items (left/right)	various
OK	Verifies input	various
INFO	Current channel info (toggle between pages in menu using CH▲▼/VOL◀▶)	
EPG	Opens the Electronic Program Guide	6.5
A→Z	Change to alternative frequency	
P▲	Page up	
FAV	Switch to Subtitle Mode	
LANG	Switch language	6.2.1
 / P▼	a. TV / radio mode b. Page down	5.2.4
AUDIO	Audio modes	5.2.1
	Sleep timer. Press to set different times.	
	Switches to teletext	
AUTO-SCAN	Search the network for available channels	6.2.1
 %	Signal power/quality bar	
AV / TV	Switch AV1,AV2,STB mode	

Contents

1.	List of abbreviations	1
2.	Knowing the parts – the RCU (figure 1)	2
3.	For your safety	5
4.	About this User's Manual	5
4.1	About this User's Manual	5
4.2	How to use this Manual	5
5.	Getting started	6
5.1	First-time viewing	6
5.2	General viewing functions	7
5.2.1	Volume & audio control	7
5.2.2	Select channel	8
5.2.3	Previous CH recall	8
5.2.4	TV & radio mode	8
5.2.5	Pause frame	8
5.2.6	Info Box	9
5.2.7	Subtitle Instruction	10
6.	More advanced functions: the Main Menu	11
6.1	CH Manager	11
6.1.1	TV Channel list and radio Channel list	11
6.1.2	Erase all Channels	12
6.2	Channel Search	12
6.2.1	Auto Scan	12
6.2.2	Manual Search	13
6.3	Setup	14
6.3.1	System Setting	14
6.3.2	Clock Setting	15
6.3.3	Software Upgrade	15
6.3.4	Factory Default	15
6.4	Info & Conax.	16
6.4.1	System information	16
6.4.2	View Status	16
6.4.3	CA Control	16
6.4.4	About Conax CA	17
6.5	Electronic Program Guide (EPG)	17
	Appendix I Hardware installation	18

3. For your safety

- Always ensure that there is enough space around the VP2002 unit for sufficient ventilation
- Do not cover the VP2002 unit and keep it away from sources of heat (such as other electrical units)
- Use a soft cloth and a mild solution of washing liquid to clean the casing
- Do not connect or modify cables while the VP2002 unit is connected to a power source
- Do not remove the cover
- Do not allow the unit to be exposed to extreme heat, cold or humid conditions
- Never allow liquid, moisture, spray, etc. to come into contact with the inside of the unit.

4. About this User's Manual

4.1 About this User's Manual

Please note that for reasons of space this manual contains a number of abbreviations (eg. RCU, EPG, CH, etc.). **These abbreviations are listed on the inside front cover** (next to the diagrams of the Remote Control Unit (RCU))

This Users's Manual provides information on the various components and functions of the VP2002 and how to use them. The manual does not deal extensively with the hardware installation of the system in your vehicle. This should always be carried out by qualified personnel (A brief description of the hardware installation and settings is given in appendix I).

4.2 How to use the Manual

The Manual is based on the buttons on the RCU. The function(s) of each button is explained in detail in the relevant sections. An index of functions with corresponding buttons is given in section 2 '**Knowing the parts**'.

All functions of the VP2002 can be initiated using the RCU (Remote Control Unit). The VP2002 makes use of user-friendly on-screen displays and menus. These displays and menus will guide you through installation (if necessary), channel organizing, viewing and many other functions.

If at any time when using the menus you want to return to normal TV mode, press the Exit button (repeatedly if necessary).

Please be aware that new software may change the functionality of the VP2002. Should you experience any difficulties with the operation of your VP2002, please consult the relevant section of this manual, including the FAQs and Problem Shooting (appendix II), or alternatively call your dealer or a customer service adviser.

5. Getting started

If at any time when using the menus you want to return to normal TV mode, press the **Exit** button (several times, if necessary)!


It is useful to fold open the inside cover (section 2. Knowing the Parts) and keep it open for easy reference.

5.1. First-time viewing (initial programming)

 
Initial programming

Normally, your VP2002 will have been installed and pre-programmed. If your VP2002 has already been tuned by the installer, skip this section and go on to section 5.2 '**General Viewing Functions**'.

However, you may need to perform an initial scan or, alternatively, you may wish to re-program your VP2002 at a later date (after using the factory default option, for example). In that case, please read the following.

Switch on the unit (press ). When the unit is new or is returned to factory default, the welcome menu is displayed showing 2 options.

- Auto Scan
- Main Menu

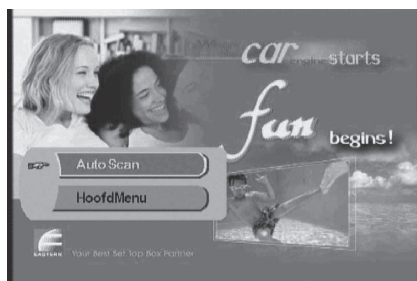


Auto Scan will run automatically. Default OSD language is the language of the country in which you purchased the unit (if supported). To change the language (and adjust other settings) see **section 6.3.1**.

When auto scan does not run automatically or when traveling long distances into zones where different transmitting frequencies are used, it may be necessary to perform an auto scan manually. To do this, press the Auto-Scan button at the bottom left of the RCU. For more information see section 6.2.1.


5.2 General Viewing Functions

Note: Smart Card / Chip Card:

The TV channels that can be viewed depend on their being 'free-to-air' (freely available). In some countries viewing certain channels may require a SmartCard. Please refer to the countries network provider for obtaining smartcards when needed. Depending on the country where you buy the unit, a smartcard may be provided with the unit.

Make sure the STB is correctly connected and configured. Turn on the ignition key of your car and make sure that your screen unit is switched on. The TV receiver should power on automatically. If not, press button  on the RCU to turn on the power. A TV channel will be shown and the information box will be displayed for a few seconds. The channels shown will depend on the initial programming.

If the incorrect language mode has been programmed, see **section 6.3.1 OSD Language**

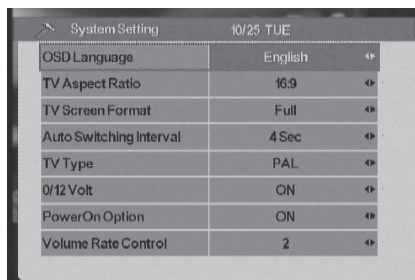



System Setting		10/25 TUE
OSD Language	English	◀▶
TV Aspect Ratio	16:9	◀▶
TV Screen Format	Full	◀▶
Auto Switching Interval	4 Sec	◀▶
TV Type	PAL	◀▶
0/12 Volt	ON	◀▶
PowerOn Option	ON	◀▶
Volume Rate Control	2	◀▶

5.2.1 Volume & audio control

Volume Control

To increase or decrease the volume, use **VOL ◀, VOL ▶** on the RCU. The volume can not be adjusted when any menu is displayed. To return to normal TV mode, press the **Exit** button (several times, if necessary)!

To mute the sound altogether, press . To return to normal sound, press  again.

Audio Control

Press the **AUDIO** key repeatedly to select one of three possible Audio settings (Left, Right and Stereo)

The current audio setting will be displayed in the channel information.

Language Selection

Press the **LANG** key on the RCU repeatedly to select the audio language. The availability of this function is dependent on the audio signal transmission.

5.2.2 Select channel

Note:

Channel selection can only be done in normal TV mode when no menus are displayed. To return to normal TV mode, press the **Exit** button (several times, if necessary)!

Note:

While using channel selection, you are selecting from a list of available channels that was pre-compiled during the last 'auto-scan'. If you traveled to a different location than where you did your last 'auto-scan', it is very well possible that different channels are available. To find these channels, you first need to perform an auto-scan. For more information see **section 6.2**

Do one of the following to change channels:

- a. press (**CH▲** or **CH▼**) to go to the next/previous channel
- b. press a number (**0-9**) to go to a specific channel (press two digits in succession for channels 10 and on, i.e. press 2 and immediately press 1 to go to channel 21)
- c. While watching, press **OK**. A channel list will be displayed on the right side of the screen. Move the cursor to the desired channel. Press **P▲**, **♪ / P ▼** to scroll through the channel list page by page. Then press **OK** to watch the selected channel. If you press **EXIT** key, the channel list will disappear.

5.2.3 Previous CH recall

Press  to switch to the previous channel you were watching.

5.2.4 TV & radio mode

While viewing a TV channel, press **♪ / P ▼** to toggle between TV and Radio modes.


5.2.5 Pause frame

Press **▶ ||** to pause the image on the screen. To return to normal press **▶ ||** again..

5.2.6 Info box


Every time you change channels, you will receive program information for a few seconds. While watching a channel you can display the Info Box at any time by pressing **INFO**. If you want to exit from the Info Box, press **INFO** again or press the **EXIT** key.

 When **INFO** is pressed the 1st box - the Service Status Box is displayed. This box contains information such as Channel Number, Channel Name, Current Program, Next Program, Current Program Progress, Current Time, Audio Sound Track, Audio Language & Service Status.

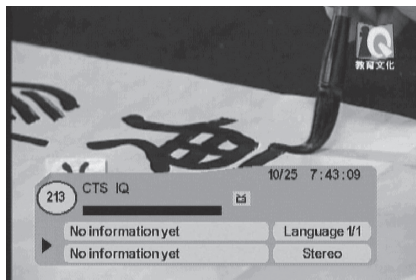


Use **CH▲**, **CH▼** to toggle between Current Program and Next Program, then press **OK** to view program details.

 Press **VOL▶** to open box 2. This box contains information about frequency, signal power and signal quality, etc.

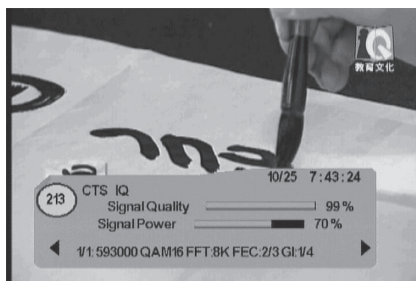

 Press **VOL◀** to go back to box 1 or press **VOL▶** a second time to open box3 the PID Status Box. This box contains technical information about the Channel ID numbers within the network.

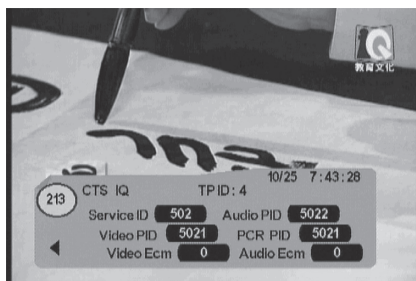

Press **INFO** or **EXIT** to close the Info Box.

5.2.7 Subtitle Instruction

1. If there are subtitles in the stream, press the **"FAV"** key to select the different language subtitle. After 5 sec, it will go into "subtitle mode"



2. When in the "subtitle mode":

- a. Most functions are blocked; **"subtitle mode"** box will be shown in the up-right corner when user want to use them.

- b. Some functions are still available, Pressing the **"MENU"**, **"EPG"**, **"AV/TV"** and **"CH▲,CH▼"** key will close the subtitle mode and present the original function.

Pressing the **"VOL◀,VOL▶"** key

 
will not close the subtitle mode, presenting the volume changing function, but without the volume bar.

Pressing the **"FAV"** key can select the different subtitle language, or close the subtitle mode.

- c. Press the **"Exit"** key will close the subtitle mode.

- d. Shut down STB will close the subtitle mode.

3. Changing channel as soon as select a subtitle language will cancel the subtitle request

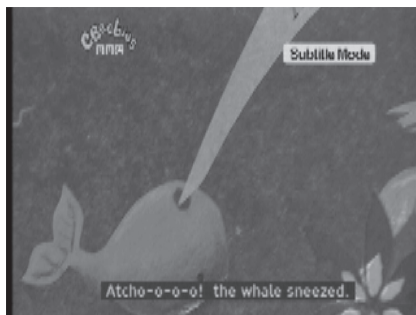

6. More advanced functions: the Main Menu

The Main Menu consists of 4 sub-menus:

CH Manager	(see section 6.1)
Channel Search	(see section 6.2)
Setup	(see section 6.3)
Info & Conax.	(see section 6.4)

 
To access the main menu, press the '**Menu**' button on the RCU.

6.1 CH Manager

When in Main Menu (press **MENU**) toggle down one step (using **CH▲**, **CH▼**) to highlight CH Manager in the menu. Press **OK** or toggle right (**VOL▶**) to enter CH Manager menu.

The CH Manager menu consists of 3 sub-menus:

- TV Channel List (6.1.1)
- Radio Channel List (6.1.1)
- Erase All Channels (6.1.2)

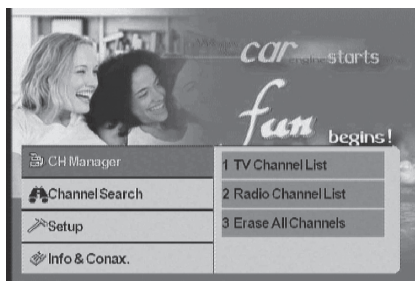


6.1.1 TV Channel list (and radio Channel list)

The TV Channel List and the Radio Channel List are used in the same way. Only the TV Channel List is described in this manual.

Toggle to TV Channel List (**CH▲**, **CH▼** / **VOL◀**, **VOL▶**)

 Press **OK**. The TV Channel List menu opens.

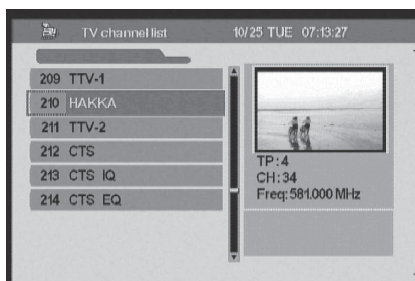

On the left is a list of channels. On the right is a so-called PIG (Picture in Graphic) screen on which you can watch the current TV channel. Channel information is shown underneath the PIG screen.

When you move the cursor down the channel list the PIG screen will change accordingly.

6.1.2 Erase all Channels

If you want to delete all the Channels in the TV Channel List and Radio Channel List then select the Erase All Channels as follows:

 
In the Main Menu (press **MENU**), toggle to Channel List (**CH▲,CH▼** / **VOL◀,VOL▶**) and then across to 'Erase all Channels'. Press **OK**.

After Deleting all the Channels pressing TV Channel List or Radio Channel List will cause a message box to be displayed: No TV Channel List or No Radio Channel List.



6.2 Channel Search

In the Main Menu (press **MENU**), toggle down to Setup (using **CH▲,CH▼**)

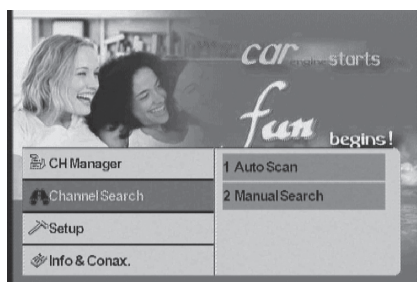

6.2.1 Auto Scan

In the Main Menu (press **MENU**), toggle down to Setup (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight Auto Scan. Press **OK** to start high-speed automatic scanning. The channels found and programmed depend on your location.

With every auto-scan, the receiver scans all possible frequencies and compiles a list of all available channels. If a new channel is found, it will be added to the channel list.

To perform an auto-scan without accessing the menu, you can also use the '**AUTO-SCAN**' button on the RCU.

6.2.2 Manual Search

 
Manual search is for advanced users and offers the ability to search for specific channels. Regular users are recommended to use '**AUTO-SCAN**' (See 6.2.1) In the Main Menu (press **Menu**), toggle down to Setup (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight Channel Search. Press **OK** to start Channel Search. Use **CH▲,CH▼/VOL◀,VOL▶** to select City Number or CH number. Under CH number you can scroll through the various frequencies of stored multiplexes using the **VOL◀,VOL▶** buttons. When pressing **LANG** extra options will become available to enter a frequency manually. When a frequency is entered or selected in the CH number selection, all relevant information will be displayed in the right window.

Toggle down to Search Channel and use **VOL◀,VOL▶** for various search options and press **OK** to initiate search. You can search just the selected channel (frequency), the selected network, Area, or perform a Complete Scan (all channels in the frequency range 132 – 880 MHz).

6.3 Setup

This menu consists of 4 sub-menus as shown below.

- System Setting (6.3.1)
- Clock Setting (6.3.2)
- Software Upgrade (6.3.3)
- Factory Default (6.3.4)

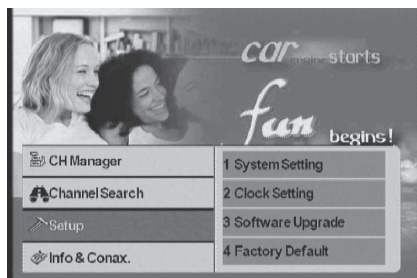

6.3.1 System Setting


In the Main Menu (press **MENU**), toggle down to Setup (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight System Setting. Press **OK** to start. Edit various functions:

Depending on the country where you buy your receiver, some functions might not be available in this menu.:

OSD Language	Lets you select the desired language.
TV Aspect Ratio	This function provides 4:3 and 16:9 two ratio for user to select. If your TV supports 16:9 screen format and selected channel provides 16:9 format program, select 16:9.
TV Screen Format	There are four screen format could be selected, Full 、Pan&Scab、 Letter Box and Combined.
Auto Switching Interval	User could set the auto switching interval time from 2 to 30 Seconds when the box can't receive the video signal. User also could use the "A→ Z" key on the RCU to switch the signal immediately.
TV Type	Select the type according to your TV type is PAL or NTSC.
0/12 Volt	The 12V could provide the power to another facility. For example, an amplifier. The user could select to turn on or turn off.
Power On Option	This function provide user to select the VP2002 at a power on mode or a stand by mode. If the user select the VP2002 at power on mode, when user turn on the car, then the VP2002 will be turned on at the same time.
Volume Rate Control	If user connect to an amplifier, user could use the volume rate to control the volume. Ther are 3 levels could be selected.

6.3.2 Clock Setting

 In the Main Menu (press **MENU**), toggle down to Timer (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight Clock Setting. Press **OK** to display Clock Setting box.

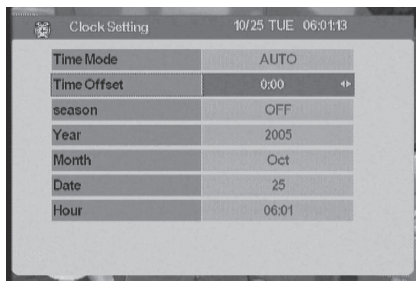

Real-time data will automatically be downloaded.

Set time zones, if necessary, using Set Local Time.

Set Summer Time, if necessary.

6.3.3 Software upgrade

In the Main Menu (press **MENU**), toggle down to Setup (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight Software Upgrade. Press **OK** to search for an available software upgrade. This function is only available when the network supports this feature. When new software is available it will be loaded into the receiver.

 
Note:

When new software is loaded this might have different functions than the software you are using now. This manual might not be accurate anymore for the new software version.

6.3.4 Factory Default

This function will restore the VP2002 to factory default settings!!


In the Main Menu (press **MENU**), toggle down to Setup (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight Factory Default. Press **OK** to start. A warning message is displayed. Select **OK** to confirm.

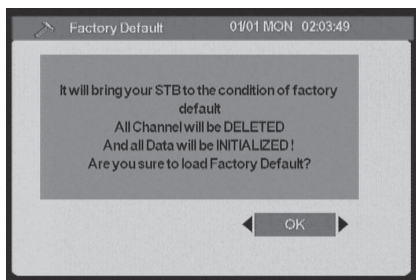

6.4 Info & Conax.

This function provides 4 information menus as shown below.

 - System Information (6.4.1)
- View Status (6.4.2)
- CA Control (6.4.3)
- About Conax CA (6.4.4)

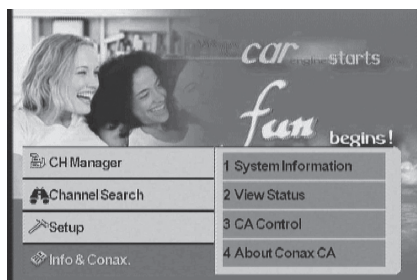


6.4.1 System Information

In the Main Menu (press **MENU**), toggle down to Info (using **CH▲,CH▼**) and then toggle right (**VOL▶**) to highlight System Information. Press **OK** to display the system information box.


6.4.2 View Status

 The smart card information could be found in this view status. User could find the smart card of the period of validity.

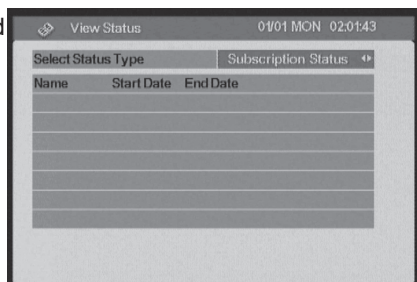


6.4.3 CA Control

 Parents could use this function to set up a password in order to prevent children from accessing the channel.

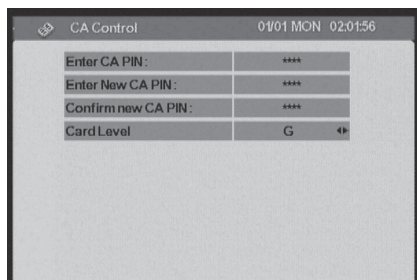

6.4.4 About Conax CA

 User could find the Conax information about the Interface Version, Smart Card no. Num of Sessions, Language, and the CA_SYS-ID.

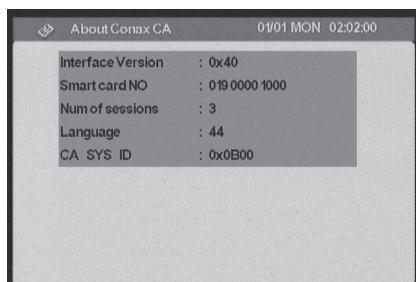


6.5 Electronic Program Guide (EPG)

The EPG can also be accessed by pressing button **EPG**.

The Program Guide accesses network TV and/or Radio Guides.

The Program Guide gives detailed information about programs, times, etc.

 Toggle up or down for more channels using the buttons (**CH▲**, **CH▼**). Move the time cursor (bar above channel list showing time by the hour) by toggling the buttons (**VOL◀**, **VOL▶**).

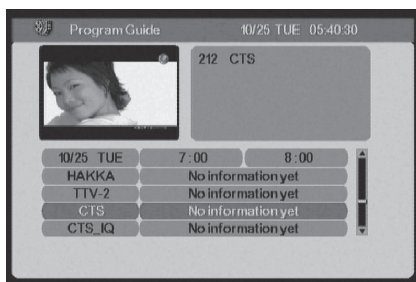

Note:

a 'no data' message will be displayed if the selected channel does not provide EPG data.

Exit the Program Guide by pressing the **EXIT** button.

Appendix I Hardware installation

AANSLUITSCHEMA SE863-T

